


REPLACEMENT TOOL



BEARING INSTALLATION (Non-DRIVE SIDE / DRIVE SIDE)

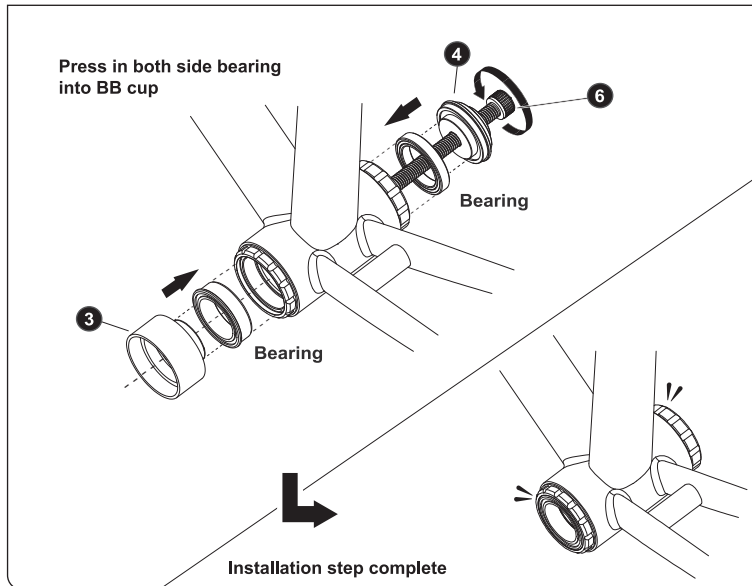

BEARING EXTRACTION (Non-DRIVE SIDE / DRIVE SIDE)

