


BOTTOM BRACKET INSTALLATION


PRAXIS WORKS M30 ITA THRFANFN RR

TRiPEAK Product NO. EMA-IB28-ITA + TF12

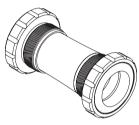




Step 1 **THREADED (TWIST-LOCK)** Non-DRIVE SIDE Cup set lock to 30Nm

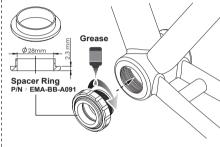

Bearing Options

- ★ SB (Steel Bearing) / ★ CB (Ceramic Bearing) Bearing Size : 30 X 42 X 7mm - (6806)
- Replacement Bearing set TRIPEAK item NO. SB : EMA-HP6806-2RS / CB : EMA-JC6806-2RS

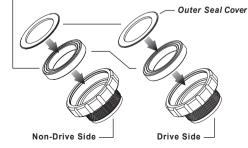

Step 2 **THREADED (TWIST-LOCK)** DRIVE SIDE Cup set lock to 30Nm



Notice Directionality

TRIPEAK P/N : EMA-TT-B003 Tool Required P/N : EMA-TT-B012 / EMA-TT-B012S Tool compatible with torque wrench for installation use.

🔨 NOTICE

• To install TRIPEAK Bottom Bracket, we strongly recommend that you have a trained bicycle mechanic at your local bike shop.

· Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.


 Make sure with the crankset are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the BB set.

. When cleaning the bottom bracket set,only use mild soap and water. Never spray with high-pressure water. It will cause BB cup internal water ingress and influencing the bearing rolling lifetime.

If you have any questions or concerns about this product Please feel free to contact us. E-mail:info@tripeakbearing.com



Installed-Width

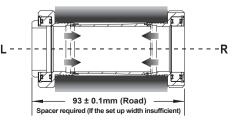

www.tripeakbearing.com